




This is where you install the armrest.

1




Remove the driveshaft tunnel cover; remove screws.

2

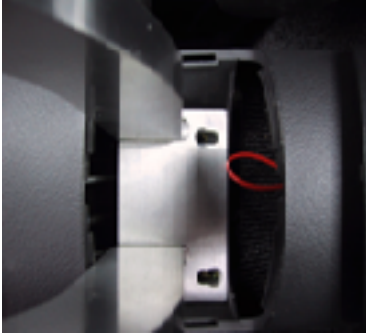


Place the armrest into the tunnel.

3

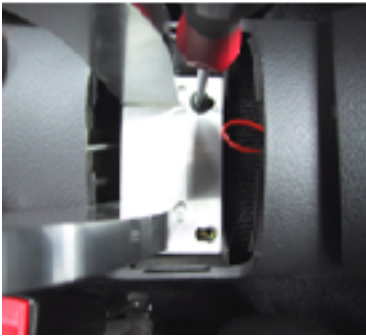


Install the armrest with the two screws provided.

4

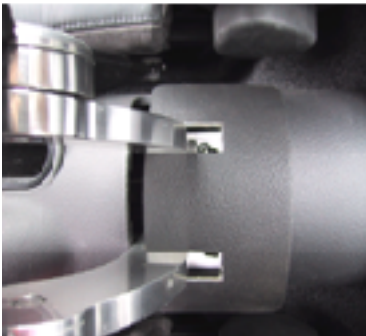

Slide the supplied cover from behind into the armrest; push down.

5

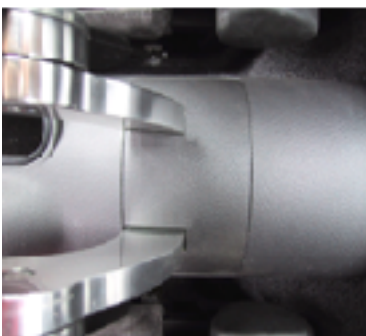

FINISHED! -- With the proper screwdriver (T25) you can install the TT-armrest in less than 5 minutes.

6